BCS250 Passive Ceiling Speaker

Quick Setup Guide

WHAT'S IN THE BOX

https://www.bluesoundprofessional.com/product/BCS250-passive-ceiling-speaker
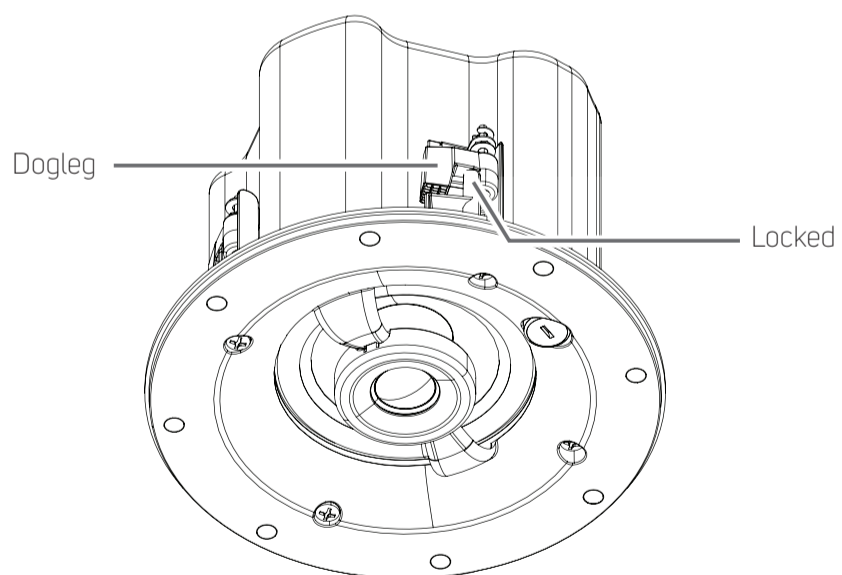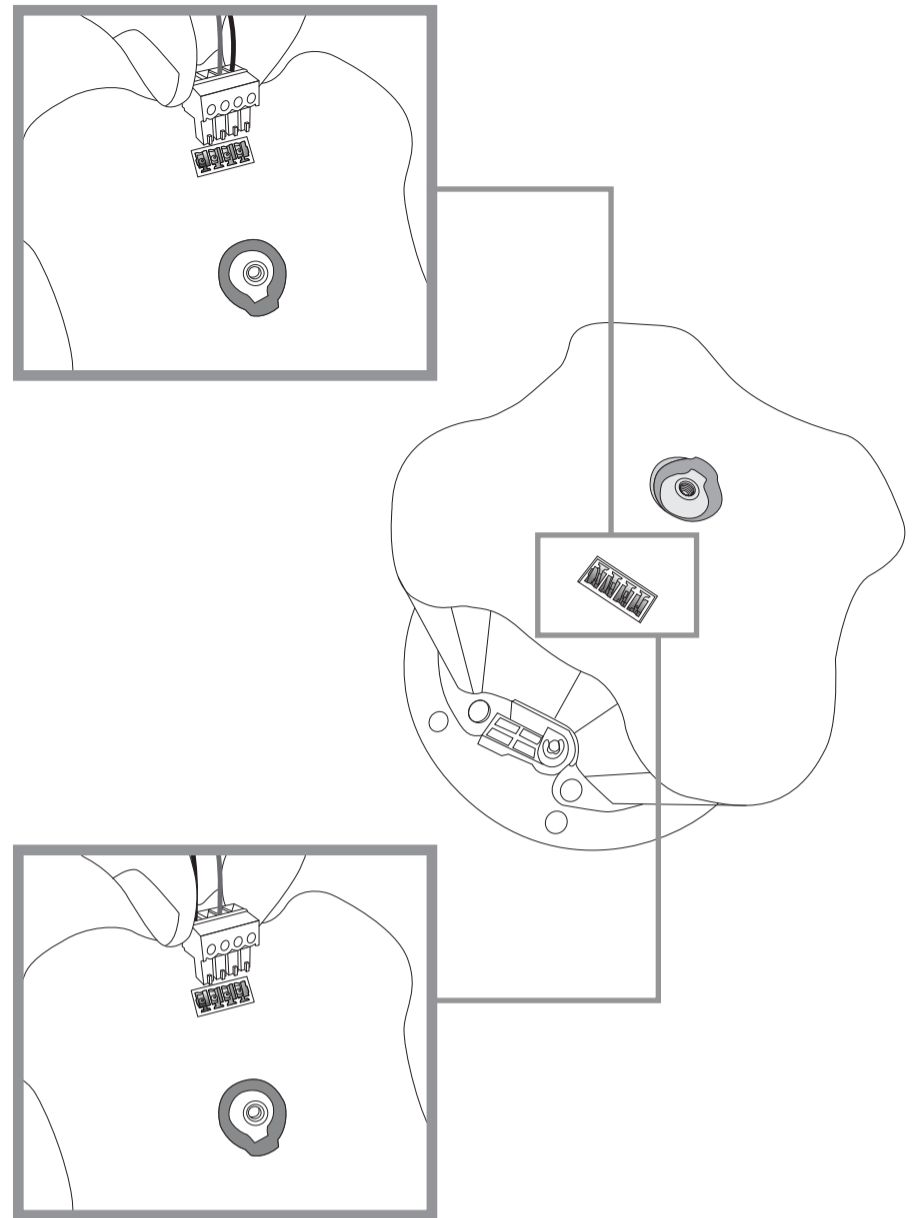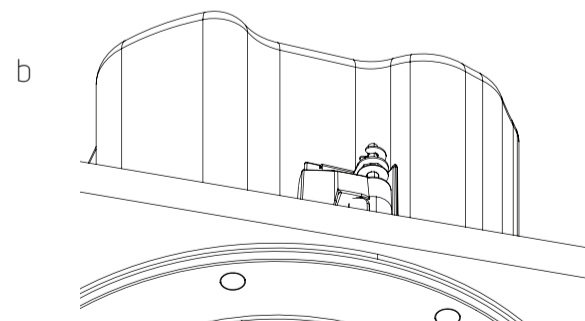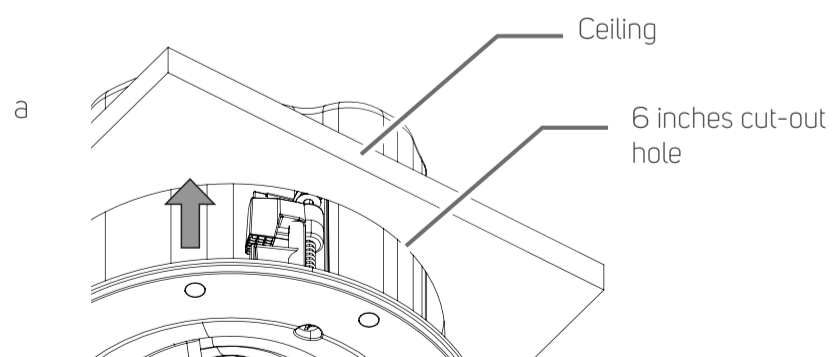
https://support.bluesoundprofessional.com

CONNECT

1   Factory default settings

Dogleg

Locked

2　Speaker wire connection

B170S

4Ω/8Ω, 70V

| 4Ω/8Ω |
| 70V |
| 100V |

| 4Ω/8Ω |
| 70V |
| 100V |

4Ω/8Ω
70V
100V

LAN/USB

SPEAKER OUT
R
L

SERVICE RESET

LINE / MIC IN
GND
R +
GND
L +
GND
SUBW
OUT
PHANTOM
ON OFF
MIC LINE

IR IN

100-120V/220-240V ~ 50/60Hz

B170S

100V

| 4Ω/8Ω |
| 70V |
| 100V |

4Ω/8Ω
70V
100V

LAN/USB

SPEAKER OUT
R
L

SERVICE RESET

LINE / MIC IN
GND
R +
GND
L +
GND
SUBW
OUT
PHANTOM
ON OFF
MIC LINE

IR IN

100-120V/220-240V ~ 50/60Hz
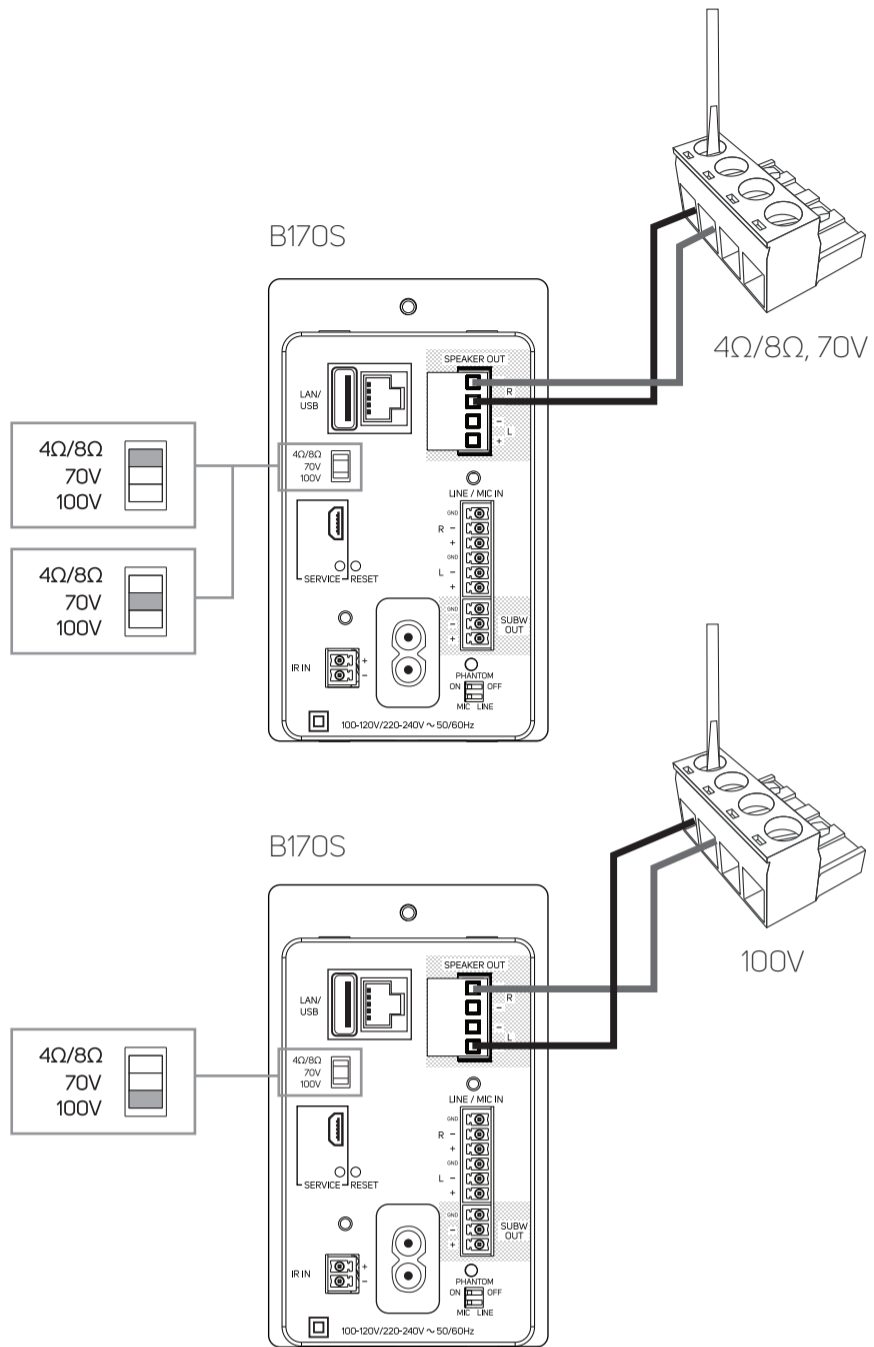
INSTALL

1　Position in-ceiling

a

Ceiling

6 inches cut-out hole

b

2   Loosen dogleg to unlock

a

counterclockwise
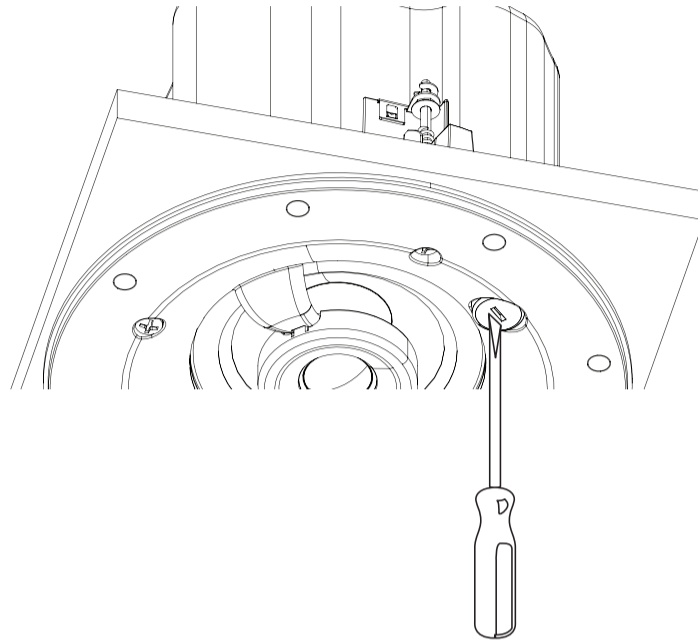
b

counterclockwise
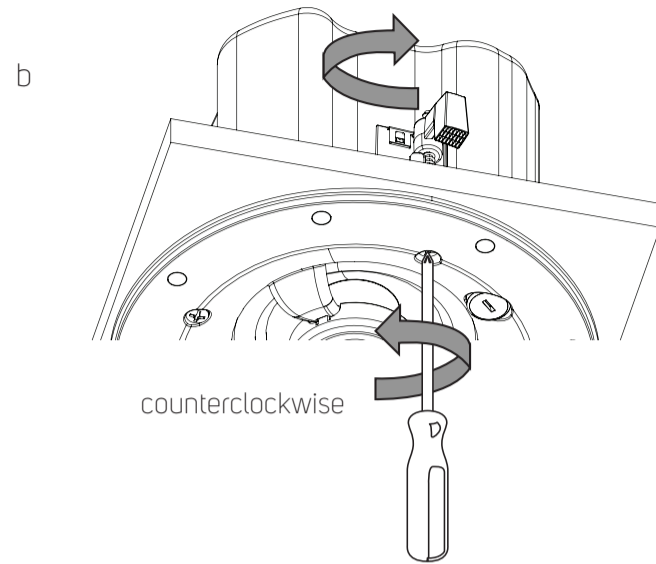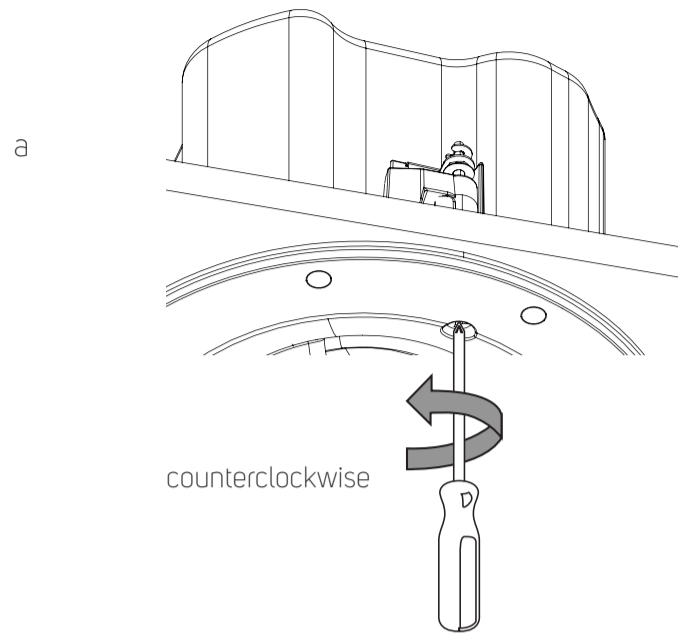
3   Tighten dogleg. Be sure not to tighten too fast or too tight.

a

clockwise

b

c
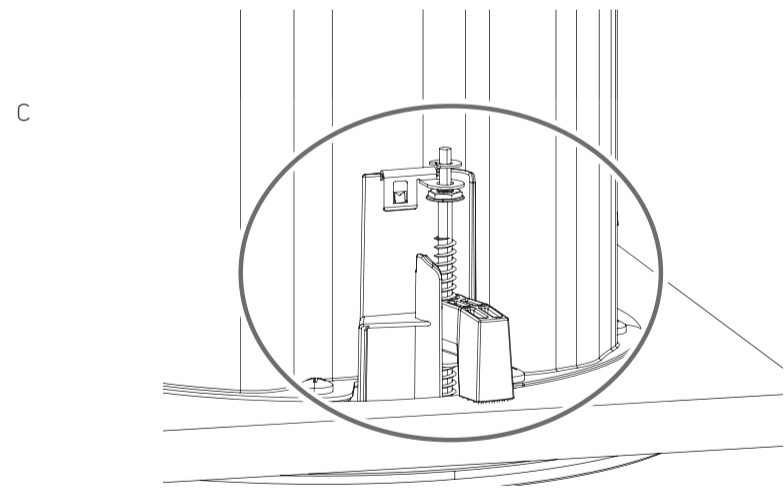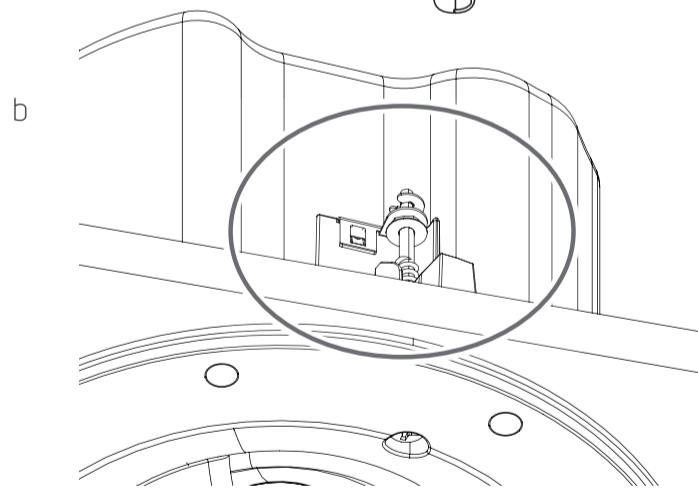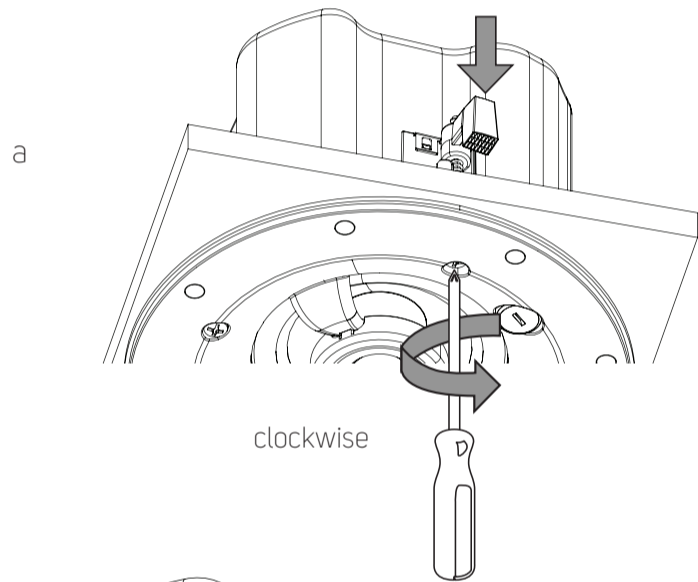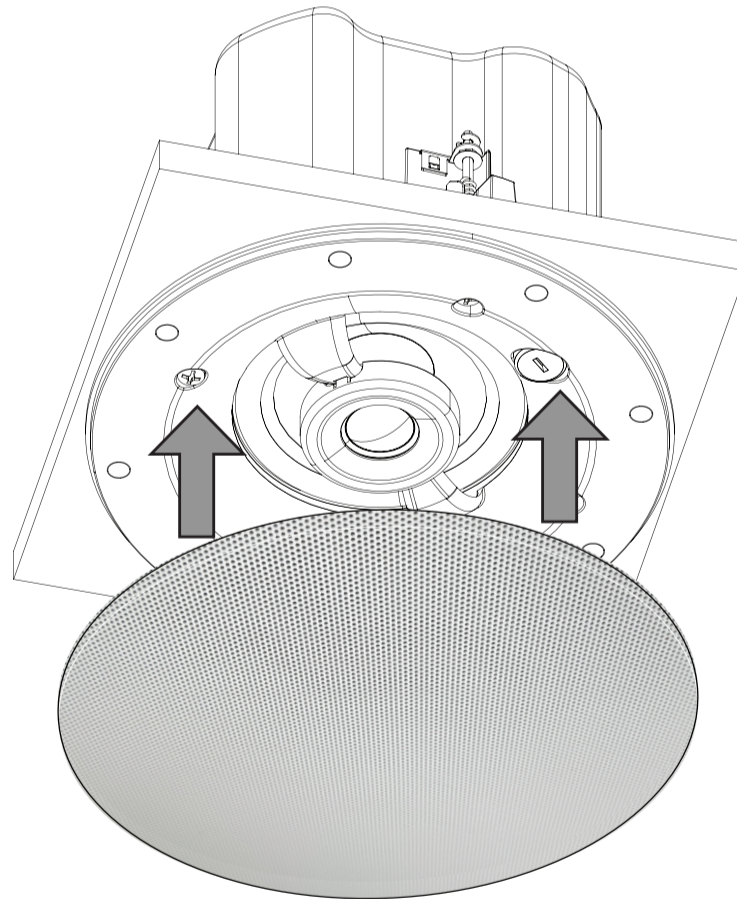
4   Repeat Step 2 and 3 for the three other doglegs.

5   Adjust Selector switch to desired setting

6   Install grille

Grille Options
BCS Round Grille White (Supplied) BCS Round Grille Black (Sold Separately) BCS Square Grille Black (Sold Separately) BCS Square Grille White (Sold Separately)

BCS Round Grille White